


About Doors Prepped for Glass

- Doors prepped for glass have 2-sided veneer plywood that is either stained or painted to match based on the door style
- If a mullion cabinet is at the end of a run, please note that an applied panel is recommended. This is because a mullion cabinet has a stained or painted plywood end. A standard cabinet will have a vinyl veneer that will not match the wall cabinet above. Applied panels will avoid color variation on the end of the run.
- 90° flat-front shelves are edge banded to match interior
- GLASS & GLASS CLIPS NOT INCLUDED — *For exact fit, measure opening before ordering glass


Materials Needed:

- Tape measure
- Phillips head screwdriver
- Clear adhesive caulk
- Utility knife

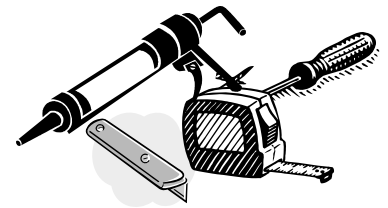

Ordering Glass

- Measure the opening of EACH door before ordering glass to ensure an exact fit
- Glass thickness should not exceed 3/16"

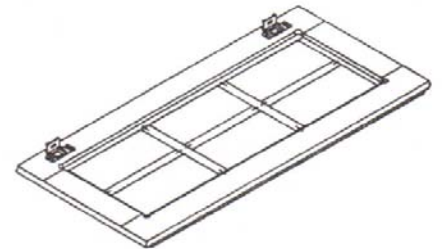

Installing Glass

- Remove the door from the cabinet
- Lay the door face-side down on a clean, flat surface
- Unpack glass and have it ready to put in place
- Apply clear adhesive caulk to the back of the door in the groove routed for glass. Keep the adhesive about 1/4" from the inside edge of the door
- Lay glass in the prepared area and apply hand pressure to seal the glass
- Allow the door to lie flat to dry for 24 hours
- After drying for 24 hours, carefully trim any excess silicone with a sharp knife
- Reinstall the door onto the cabinet

